


Create and configure a NDPS printer by using a 5600 and Axis Gateway Configuration.


Sep 1

Create a NDPS Printer by using NetWare Administrator and Axis Gateway.


- Start NetWare Administrator and select the context where you would like to create these objects.
- Mark the container and right click on it Press Insert or select Object and choose Create.
- From Class of new object choose NDSP Manager.

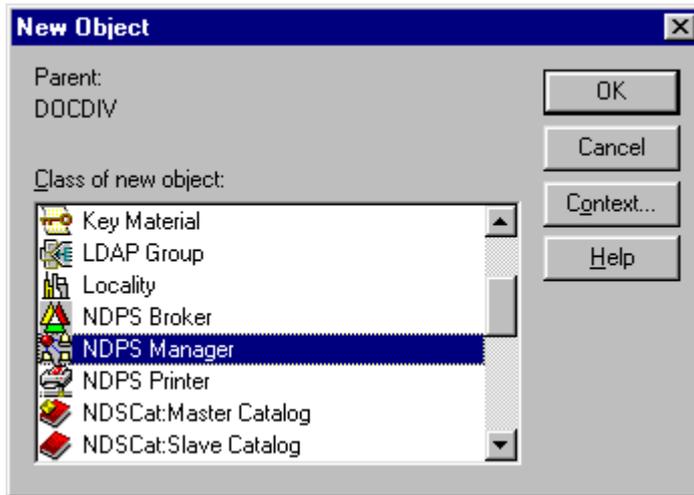

- Press OK.
- Type NDPS Manager Name
- Browse and select Resident Server for the NDPS Manager.
- Browse and select Database Volume for the NDPS Manger
- Click Create.

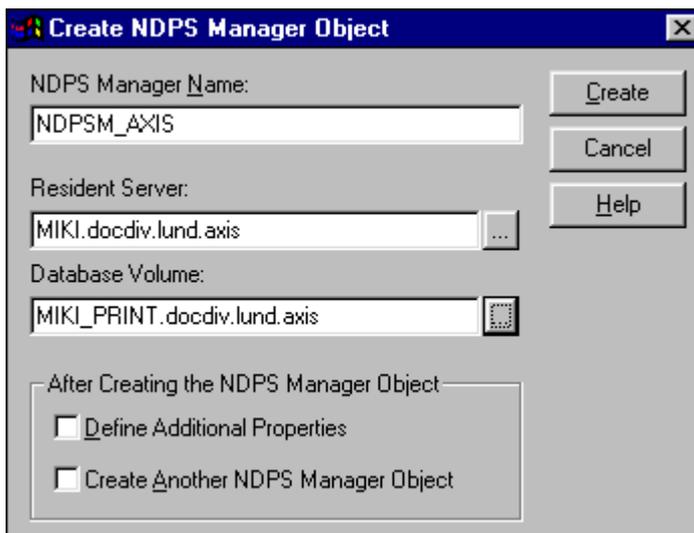

The NDPS Manager is created on the NDS tree.

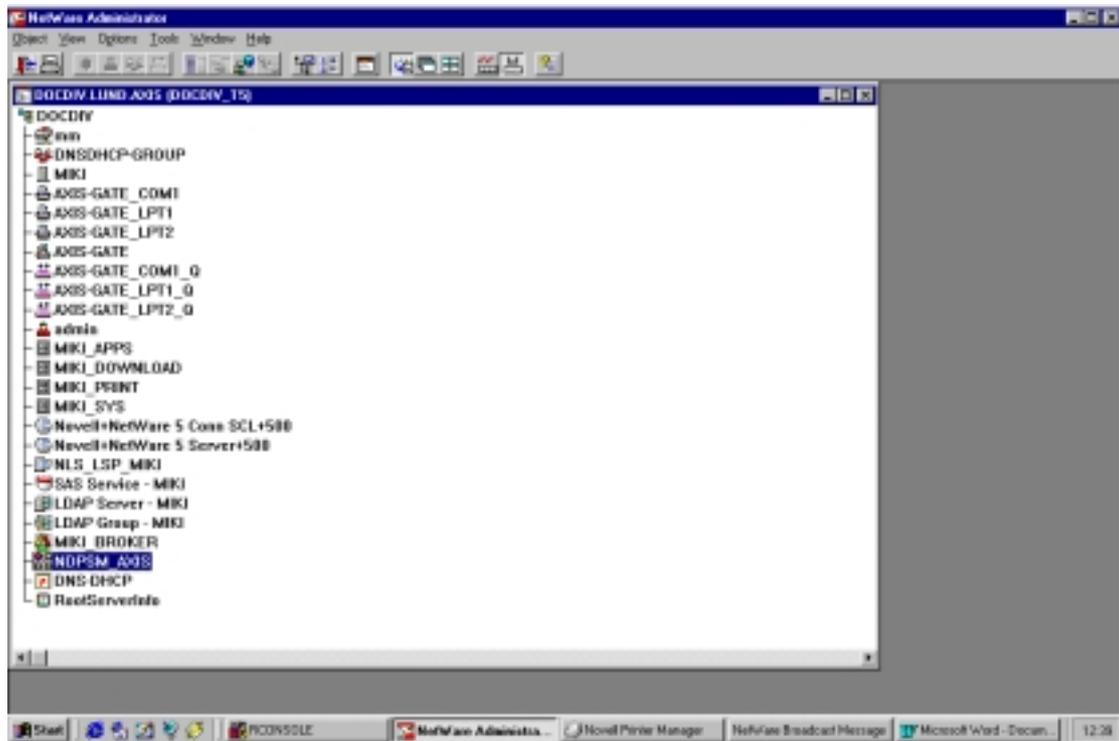


You can look at the NDPS Manager object's details.

- Mark the object (NDPSM_AXIS)
- Press Enter, double click on it or select Object /Details from the menu.


Here you can look at:

- Identification
- Access control (add or delete users or user groups)
- Printer Agent List (add new delete Printer Agents)


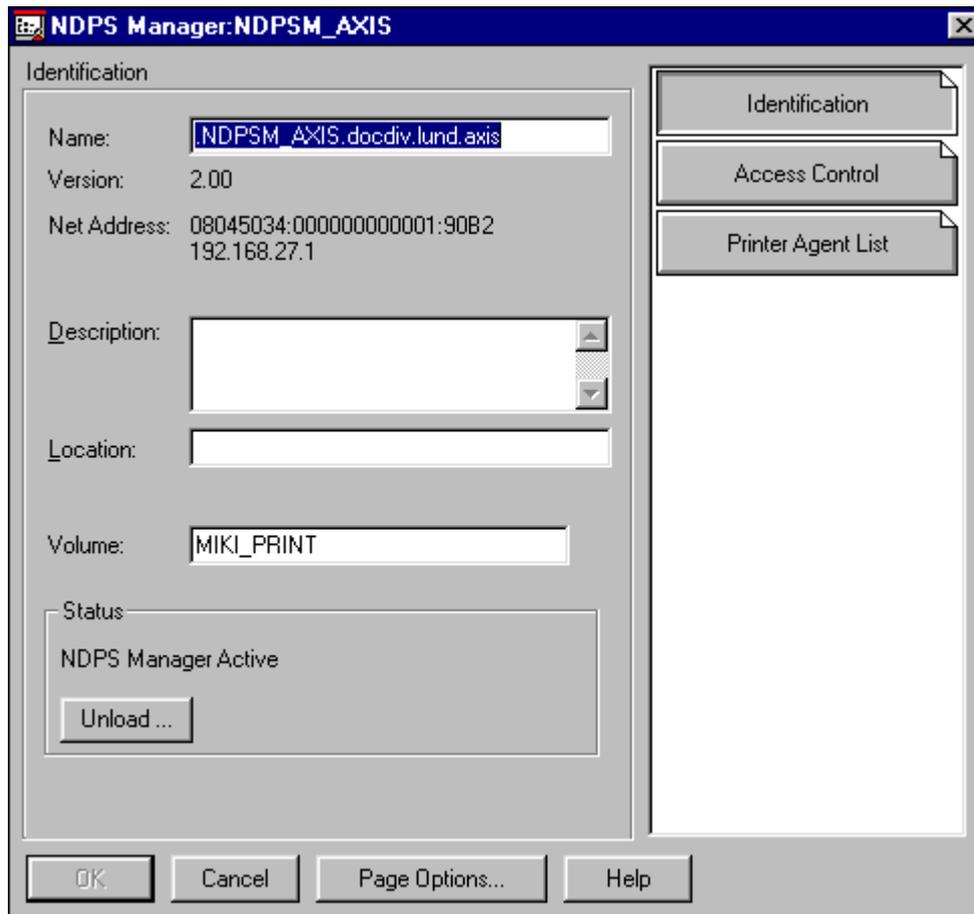


Now an NDPS printer can be created from NetWare Administrator.
Please perform the following steps:

- Mark the container (context) where you would like to have the NDPS printer located.
- Mark the container and right click on it Press Insert or select Object and choose Create.
- From Class of new object choose NDPS Printer
- Click OK

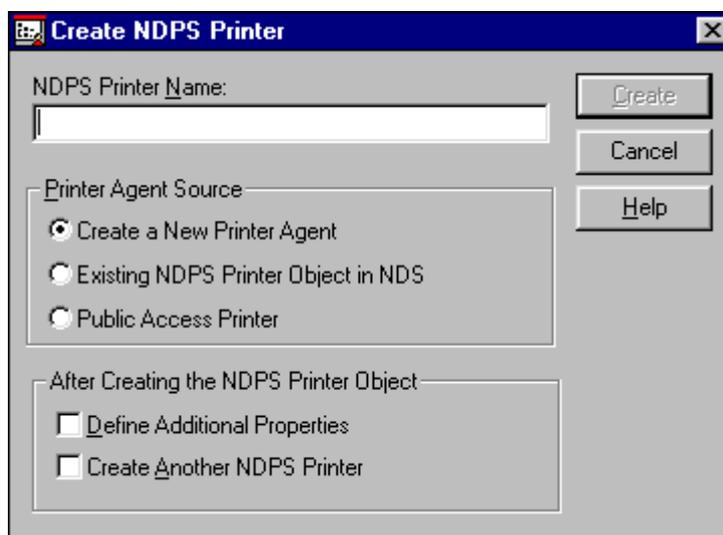


- Type NDPS Printer Name (5600_AG)
- Click Create.

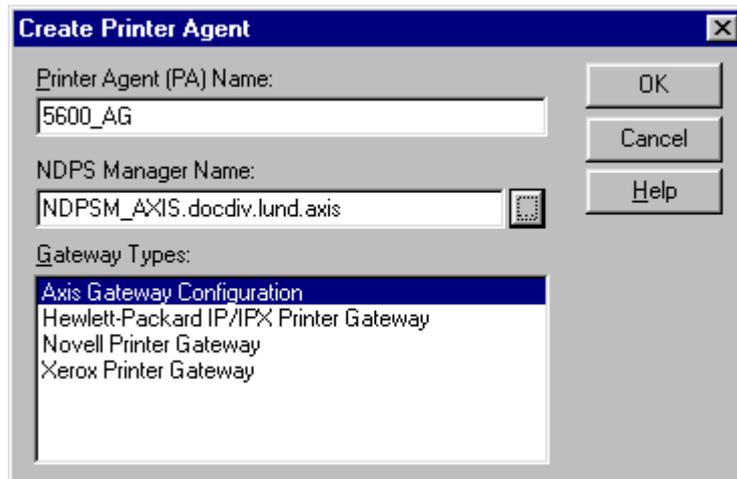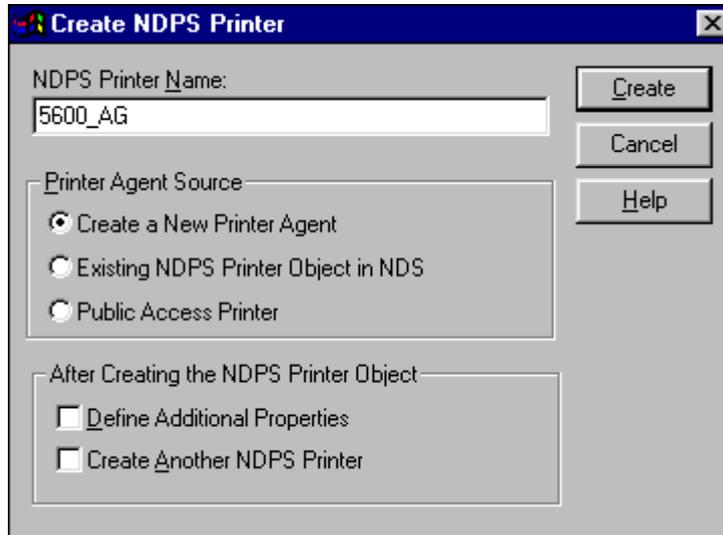




- Browse and select NDPS Manager Name (NDPS_AXIS.docdiv.lund.axis)
- Select Gateway Types – Axis Gateway Configuration
- Click OK.

Select the network protocol to be used with the NDPS gateway (IPX or IP) and printer's type.

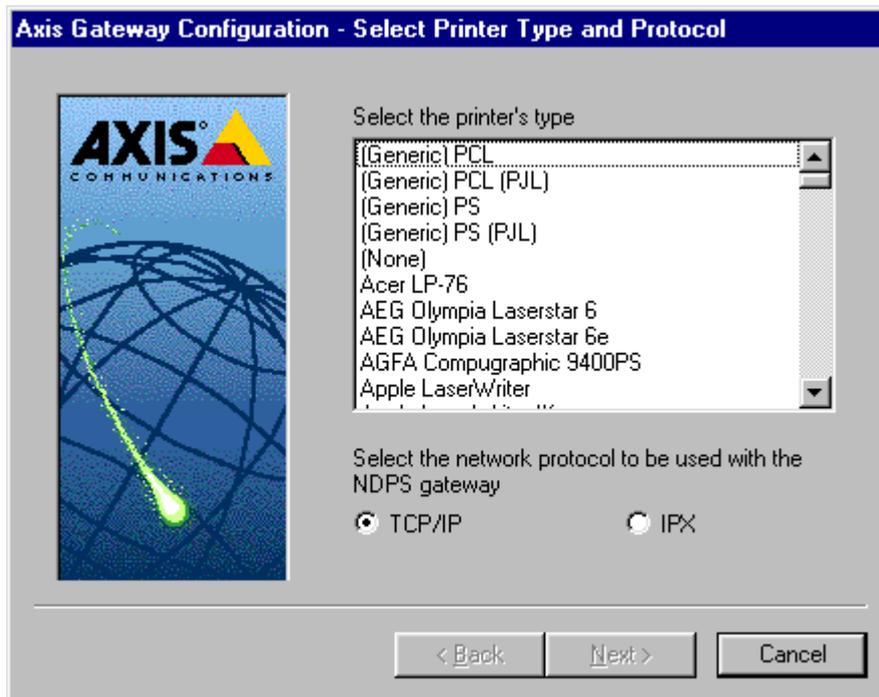


Here you can select Printer Type and Protocol.

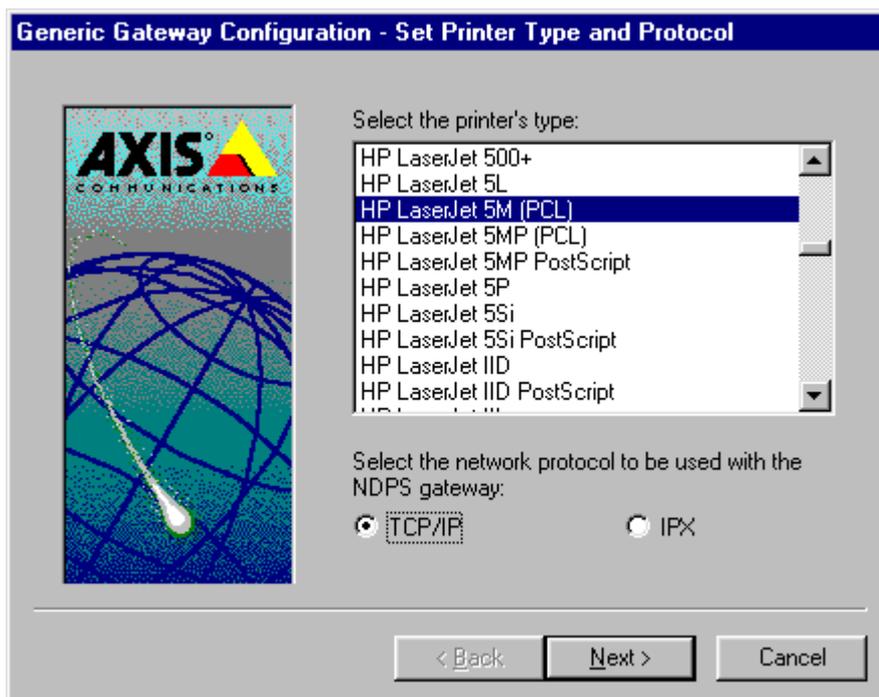

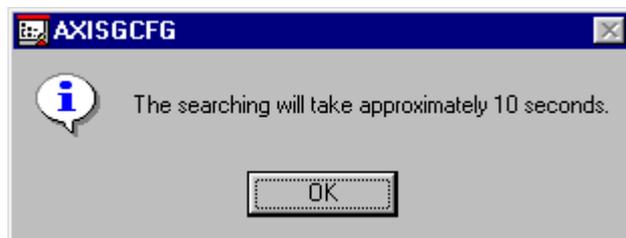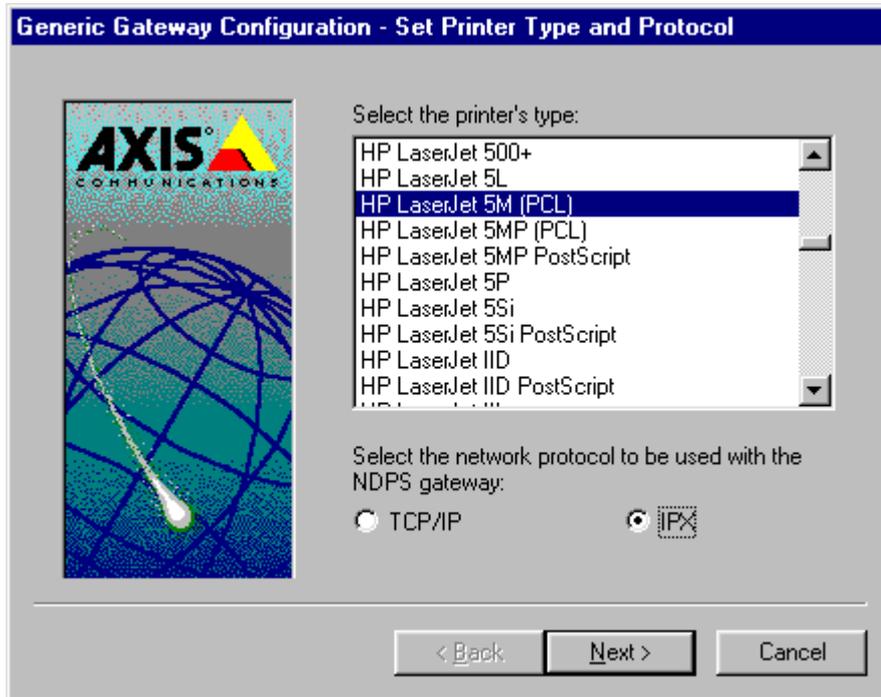

- Choose one of them and click next


Press OK.

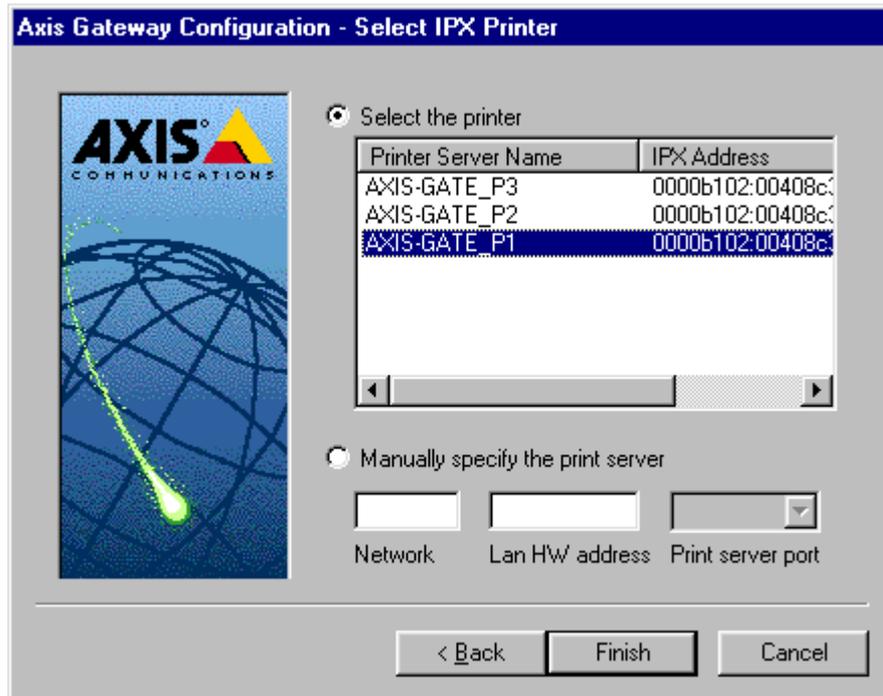

Please select one of them and press Finish.




After approximately 60 seconds next window will appear:

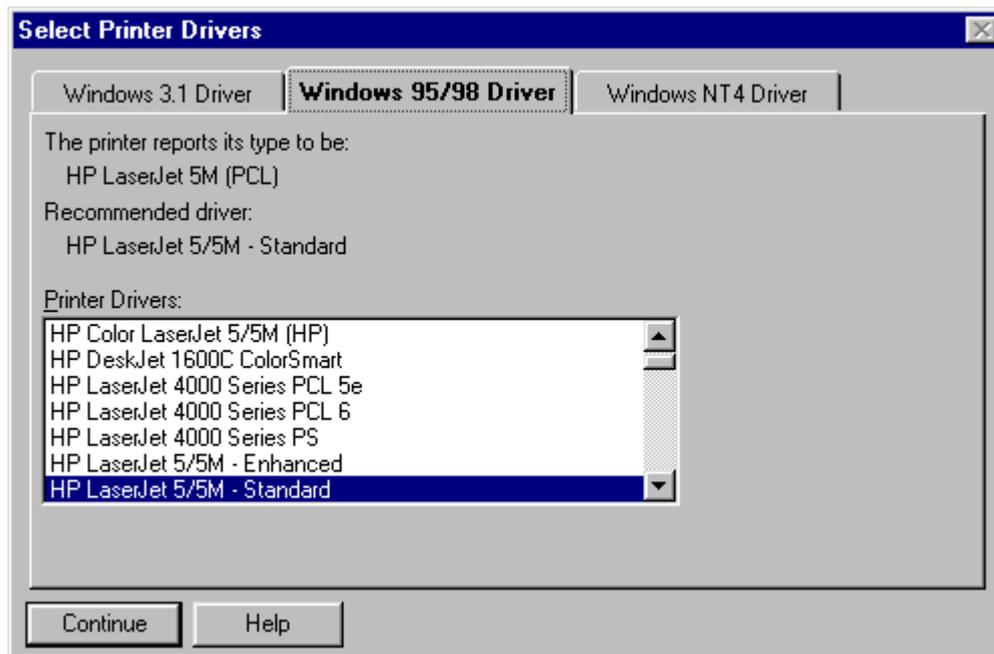


- Select printer drivers for Windows 3.1, Windows 95/98 and Windows NT and click Continue.


The new NDPS printers has been created (5600_AG)

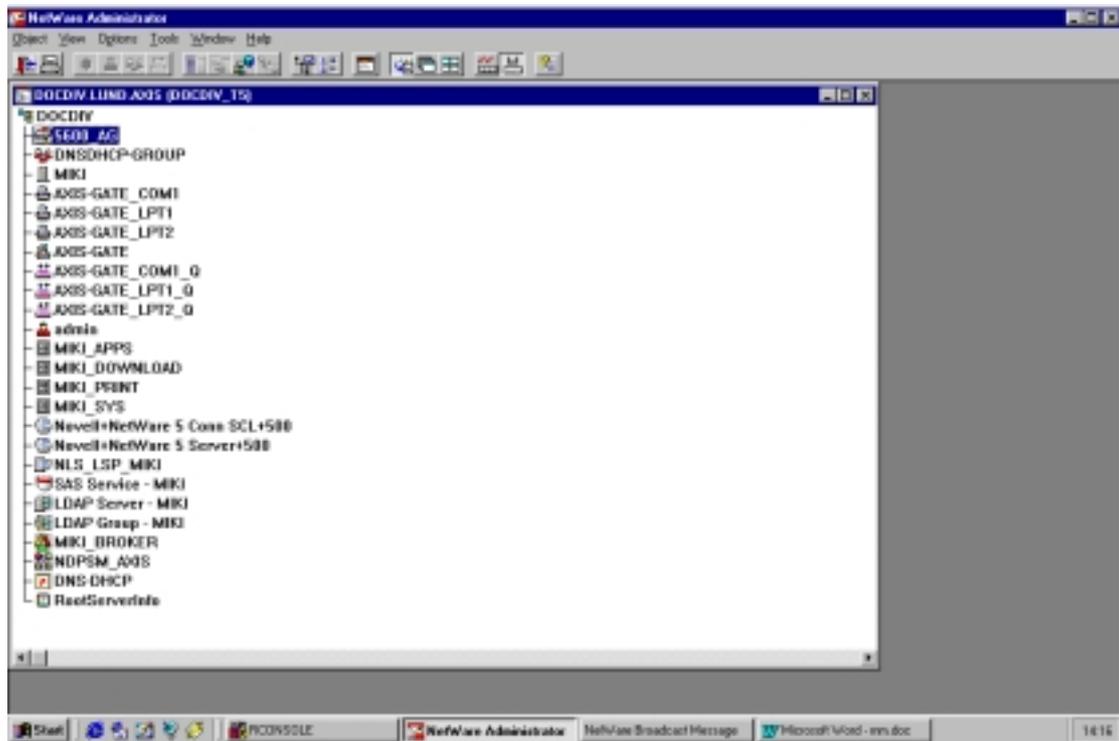



You can look at details for this object (on the same way as for every NDS object).

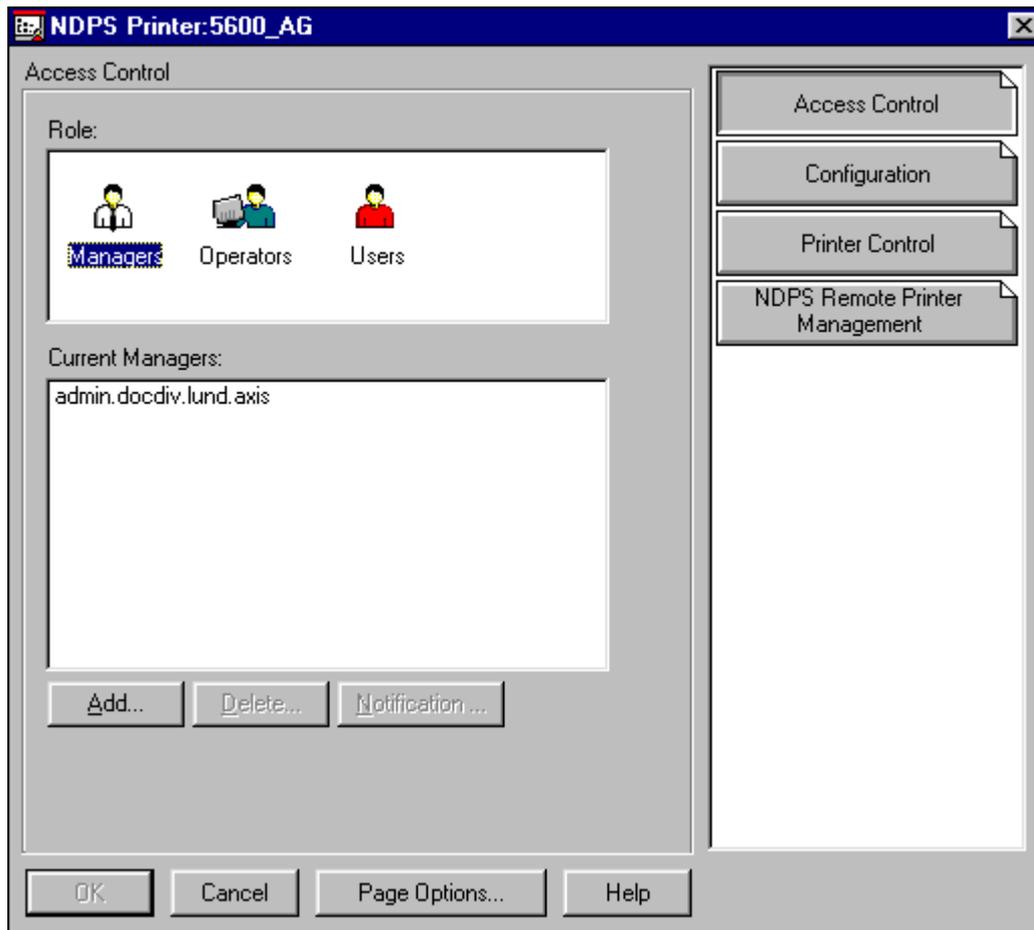

Here you can manage Access Control, Configuration, Printer Control and NDPS Remote Printer Management.

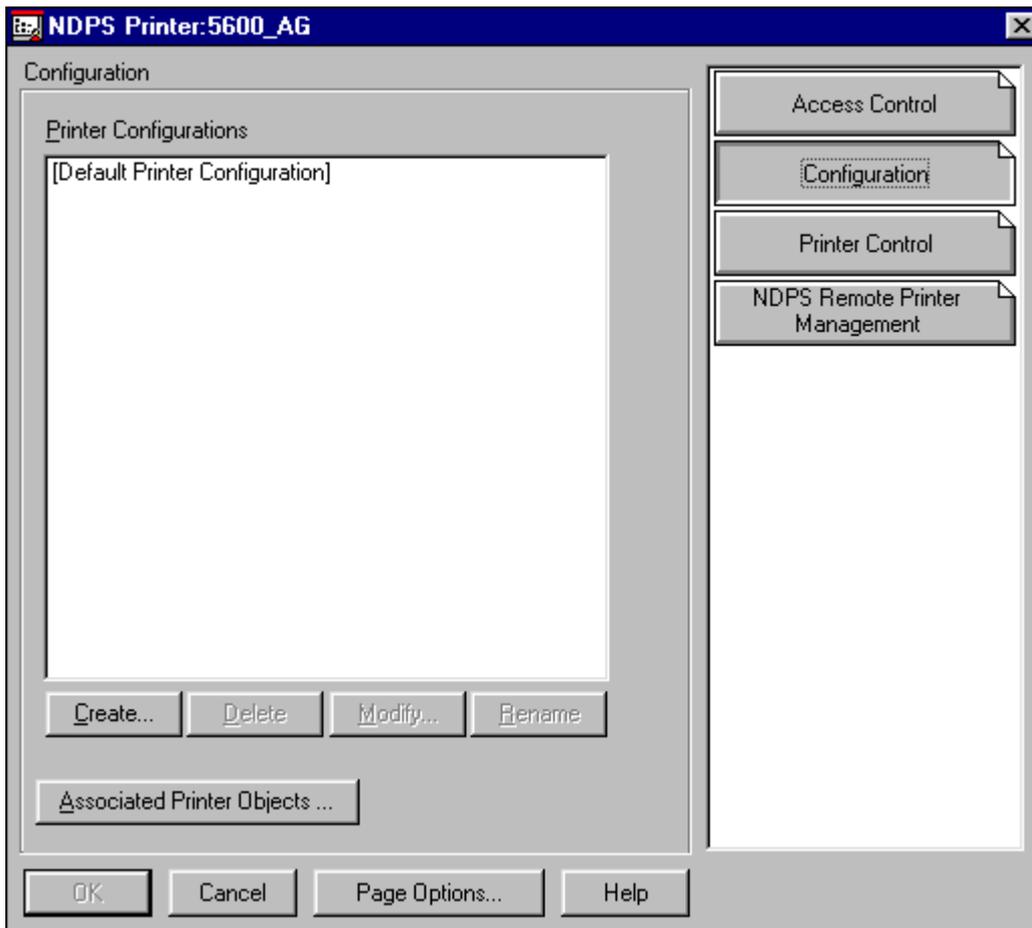

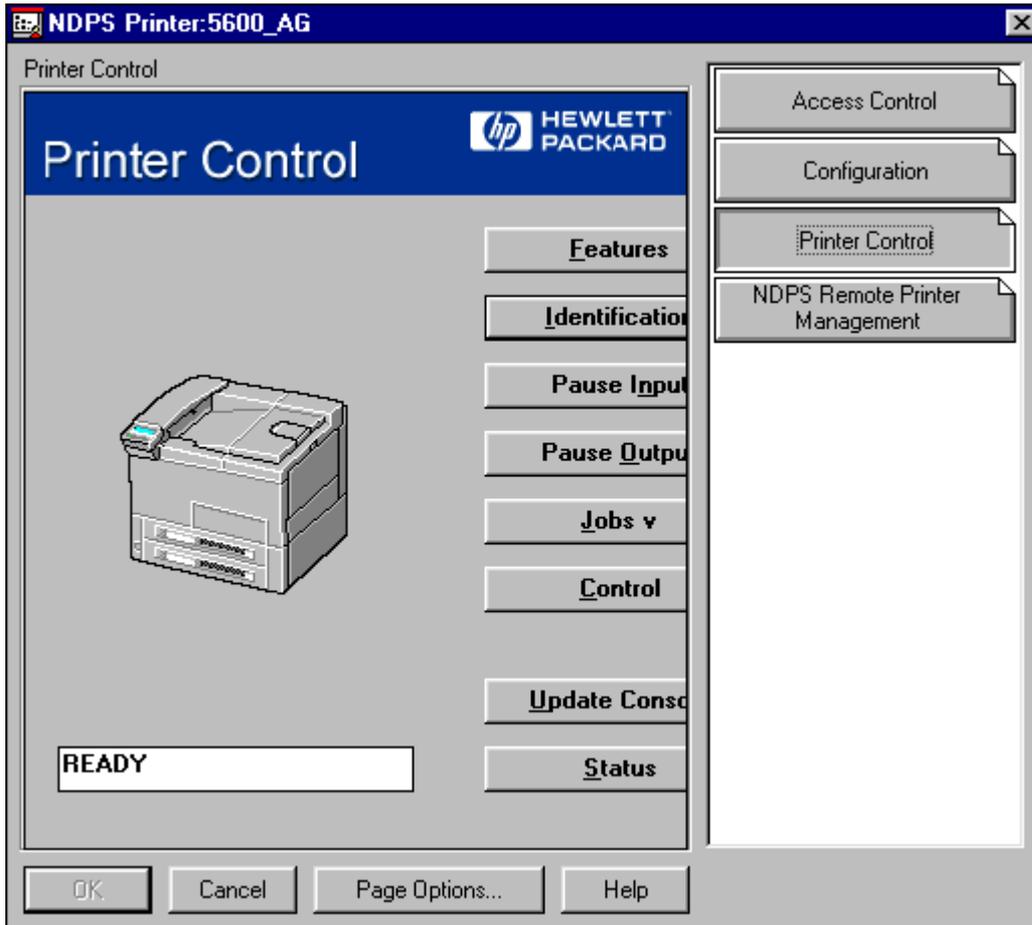

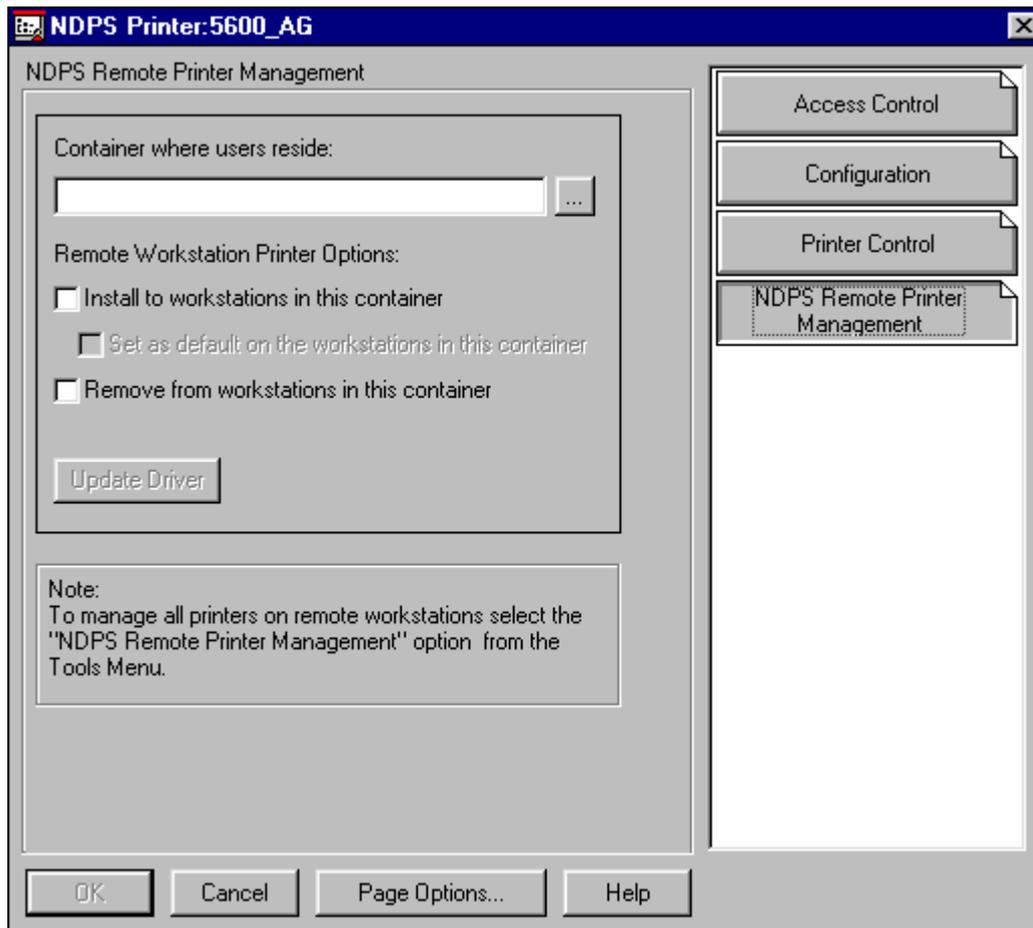



Step 2

Install a NDPS Printer on work station


- Log in on workstation e.g. Windows 95
- Map a driver to SYS\PUBLIC on file server e.g.

<\\Miki\SYS\PUBLIC>


- Browse and select Nwpmw32.exe

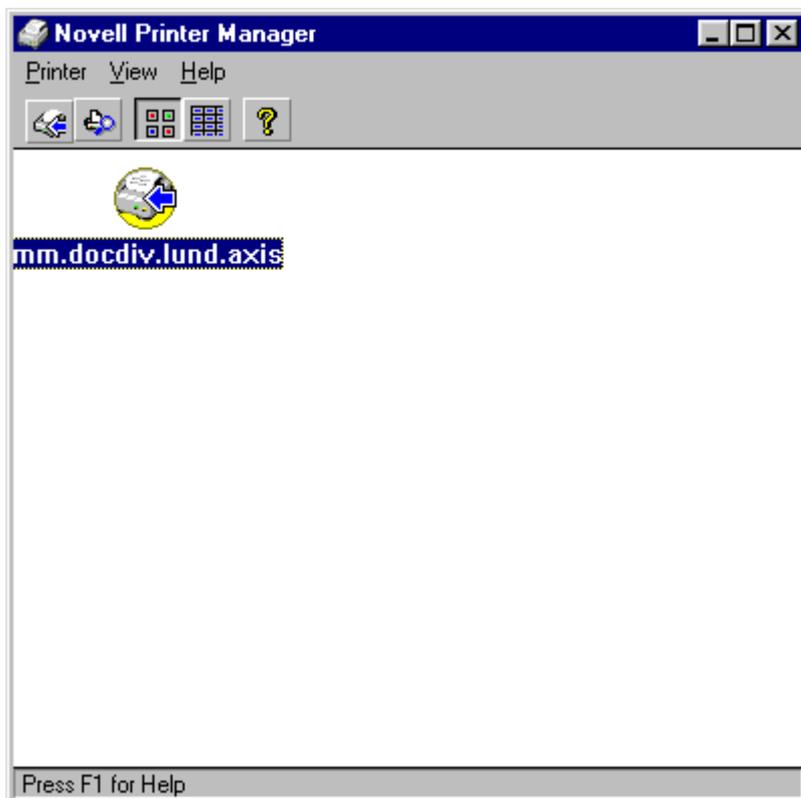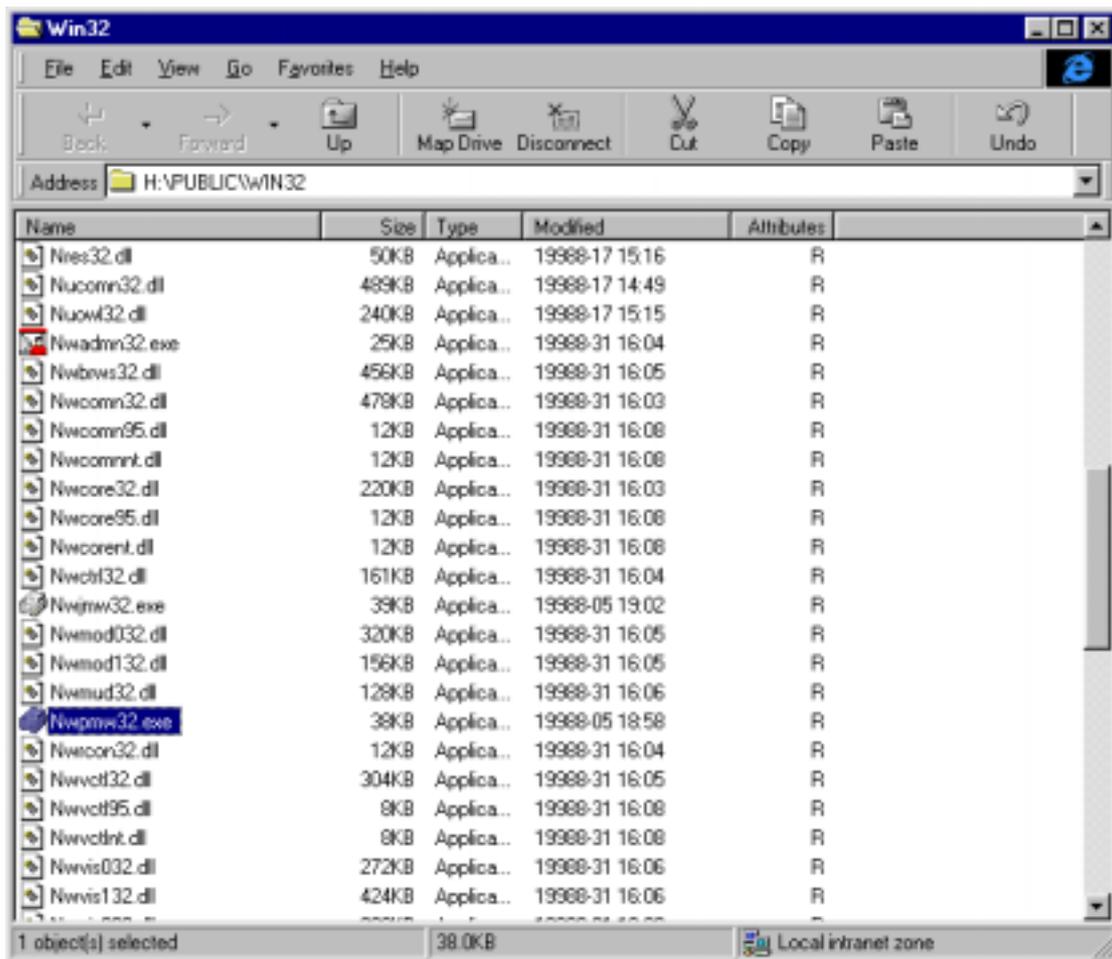

- Select Printer /New

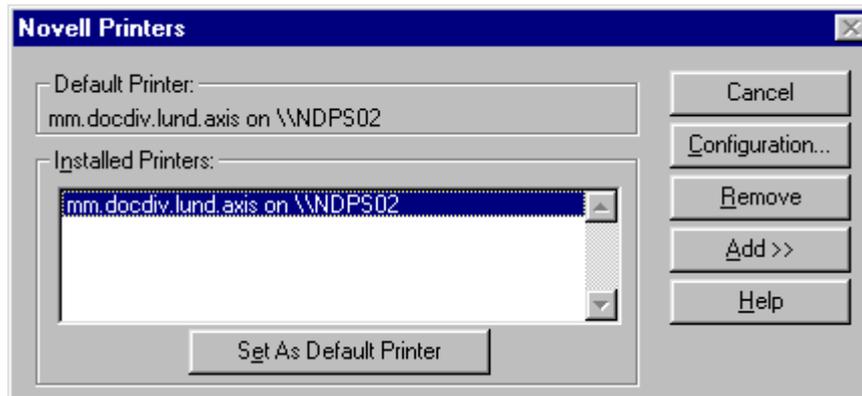


- Select Add

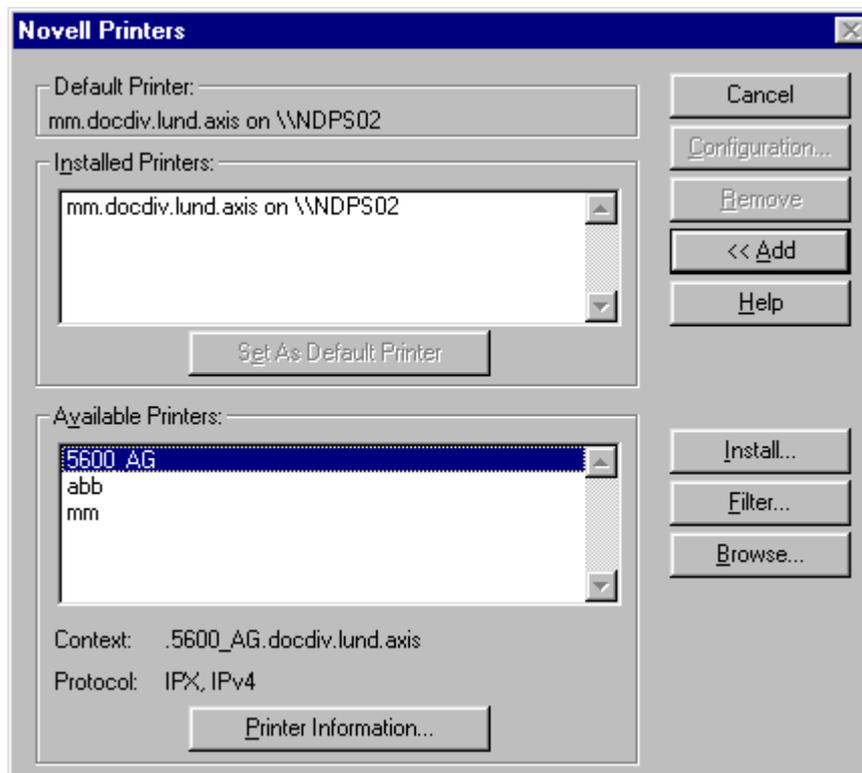


There is a list over Available Printers.


- Select the printer which you wish to install (e.g. 5600_AG)
- Click Install

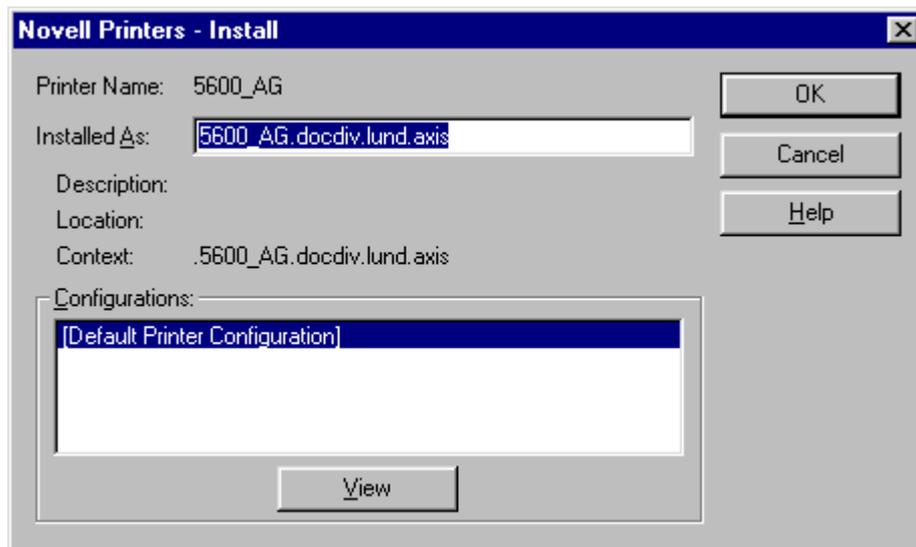


- Click OK

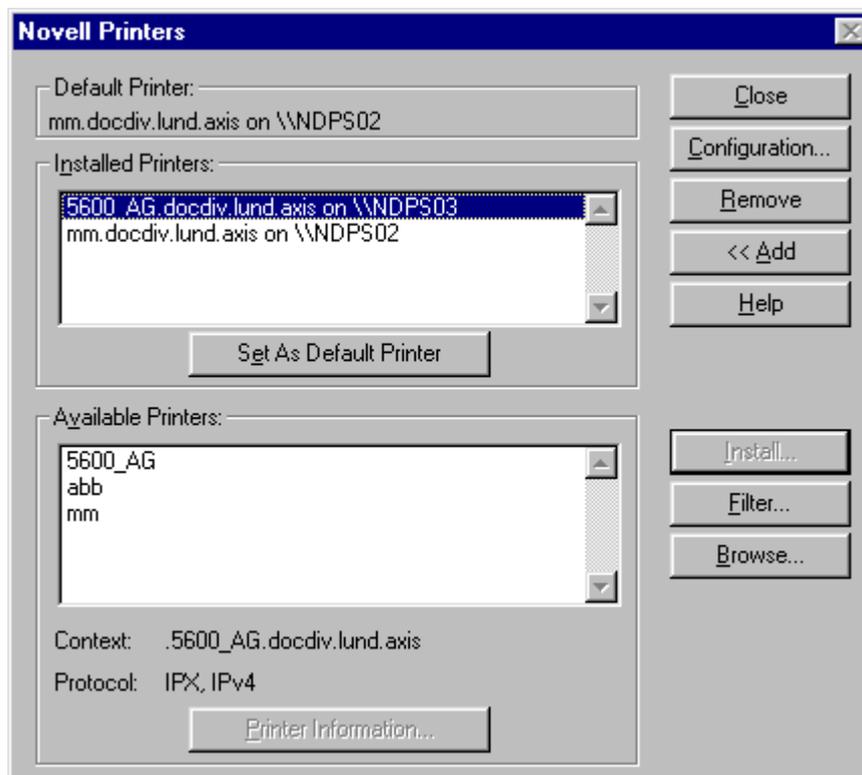

- Click Close.

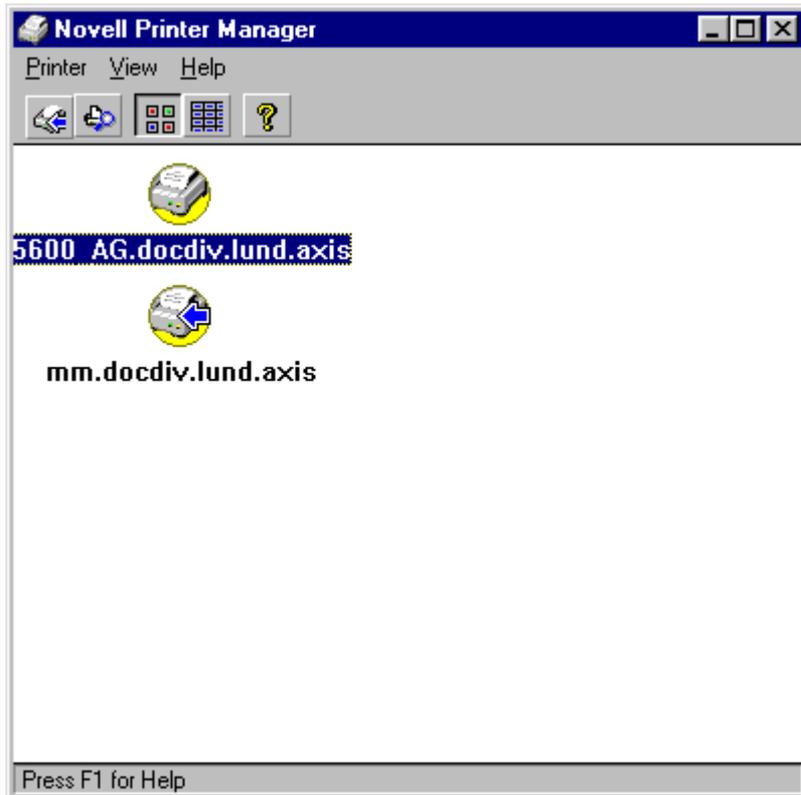

Now the printer is installed on the workstation a you can print ..

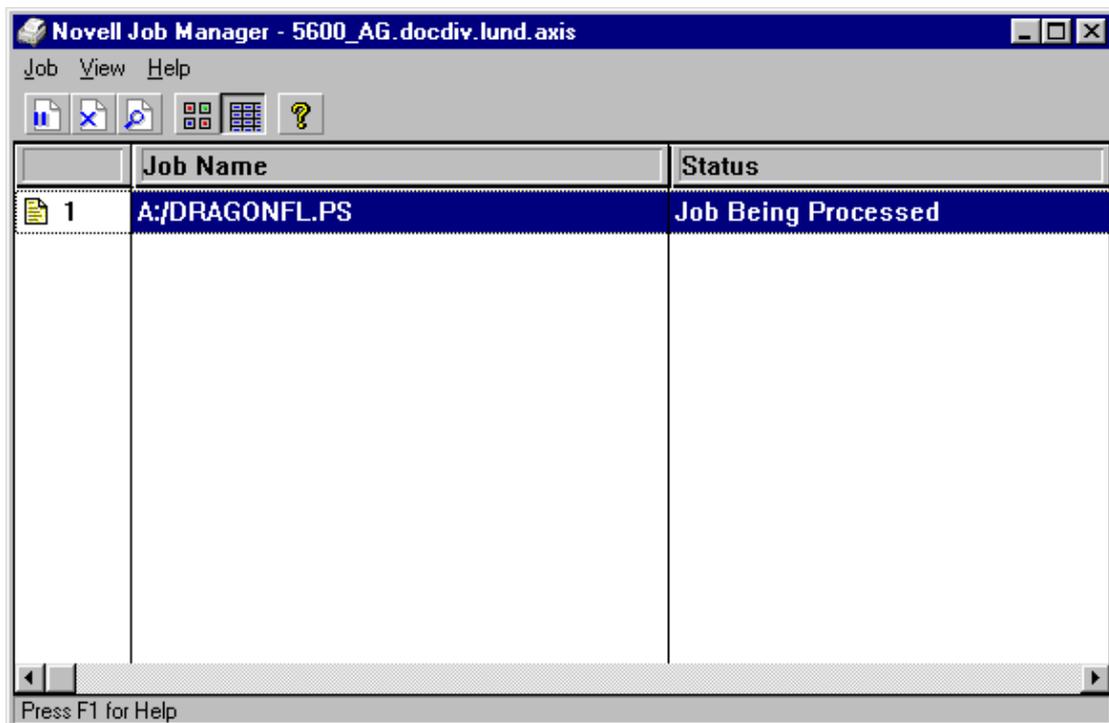

Note:

On Print Server:

- Firmware on PS must one with support for Axis Gateway 6.00.1 or above.

- HP JetAdmin Support have to YES
- Transport Protocol has to be DUAL_STACK (if you would like to use Gateway protocol IPX and IP).

On Workstation:

- Have a IPX and IP NetWare Client

NetWare file server has to be dual stack if do intend to use IPX and IP protocol on gateway (of course).